


# ESQ

BY MOVADO

**ESQ ANA-DIGI  
CHRONOGRAPHS**

OPERATING INSTRUCTIONS

## ANA-DIGI CHRONOGRAPHS

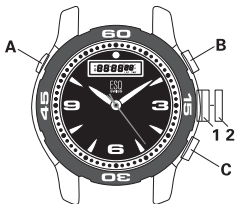

**Figure 12a**

Legend:

Push button **A**

- To select Mode

Push button **B**

- Chronograph Start/Stop

- Digital Setting

Push button **C**


- Chronograph Split-time/Reset

- Digital Enter/Exit for Settings

## Crown Positions:

Position 1 - Normal/Running.

Position 2 - Analog TIME-setting

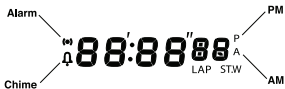

**Figure 12b**

Your ESQ BY MOVADO analog/digital chronograph features a 6-digit LCD (liquid crystal display) and 4-mode operation: Time, Alarm, Chronograph and Date. The following instructions detail how to access, set and use the features available in each mode.

NOTE: Each press and release of Push button **B** will advance numeric display by one; press and hold for rapid advancement.

## MODE 1 - DIGITAL TIME-SETTING

### To set digital time:

1. Press button **A** until time appears in digital display.
2. Press and hold button **C** for 2 seconds to enter time-setting mode.
3. Use button **B** to select seconds.
4. Press button **C** to set seconds.
5. Use button **B** to select minutes.
6. Press button **C** to set minutes.
7. Use button **B** to select hour.
8. Press button **C** to set hour.
9. Press button **B** to select 12H or 24H time. When in 12H mode, letter "A" or "P" will appear in right side of digital display.
10. Press button **C** to exit time-setting mode.

ESQ BY MOVADO Ana-Digi chronographs also have a chime that will sound on the hour when activated.

**To activate chime:**

1. Press Push buttons **B** and **C** simultaneously to turn chime on and off. Bell symbol will appear in lower left of digital display when chime function is on.

**MODE 2 - ALARM FUNCTION****To set alarm:**

1. Press button **A** until digital display reads "AL".
2. Press button **C** to enter alarm-setting mode.
3. Use button **B** to select hour.
4. Press button **C** to set hour.
5. Use button **B** to select minutes.
6. Press button **C** to set minutes.
7. Press button **C** to exit alarm-setting mode.

**To activate alarm:**

1. Press Push button **B** to turn alarm on and off. Alarm symbol will appear in upper left of digital display when alarm function is on.

## **MODE 3 - CHRONOGRAPH FUNCTIONS**

### **To operate chronograph:**

1. Press button **A** until digital display flashes "STW".
2. Press button **C** to enter chronograph mode.

### **Simple chronograph functions:**

1. Press button **B** to start chronograph.
2. Press button **B** a second time to stop chronograph.
3. Press button **C** to reset chronograph to zero.

### **Split-time functions:**

1. Press button **B** to start chronograph.
2. Press button **C** to momentarily stop chronograph; read intermediate split time 1 in digital display, indicated by letters "LAP".
3. Press button **C** to resume chronograph function.
4. To read a second split time, press button **C** again.

Repeat steps 2 through 4 to take any additional split times.

5. Press button **B** to stop chronograph; read final time in digital display.

6. Press button **C** to reset chronograph to zero.

#### **MODE 4 - DATE SETTING**

##### **To set digital date:**

1. Press button **A** until digital display shows month, date and day fields.

2. Press and hold button **C** for 2 seconds to enter date-setting mode.

3. Use button **B** to select date.

4. Press button **C** to set date.

5. Use button **B** to select month.

6. Press button **C** to set month.

7. Use button **B** to select day of week.

8. Press button **C** to set day of week and exit date-setting mode.